



## **INSTALLATION INSTRUCTIONS**

### **PUREJEEP COLD AIR INTAKE**

### **PJ9000 - JK WRANGLER 3.8 V-6**

#### **Hardware List**

- 1) PureJeep Filter, #R30-07
- 1) PureJeep Air Intake Tube
- 1) PureJeep Filter Baffle
- 1) PureJeep Tube Bracket
  
- 1) Intake Tube/Filter Adapter, #2773
  
- 2) #52 Hose Clamp (2 1/2" 3 3/4")
- 1) Grommet, 3/4"-1/2"
  
- 1) 3/8-16" x 1 grade 5 bolt
- 1) 3/8-16" x 1-1/4 grade 5 bolt
- 2) 3/8-16" Nylock nuts
- 4) 3/8" flat washers
- 1) 7/16" flat washer
  
- 1) 8 5/8" long windlass with bead
- 2) 3 1/2' long windlass with bead
- 1) 9 1/4" long windlass W/O bead
  
- 1) Installation Instruction sheet
- 1) Box
- 1) PJ Sticker



#### **Disclaimer**

PUREJEEP has made every effort to provide correct information. Each item has been fit checked for accuracy. PUREJEEP reserves the right to alter, make changes or replace part numbers and descriptions without notice. PUREJEEP will not be held responsible for changes or misprints or manufacturing changes made by the vehicle manufacturer. For questions regarding PUREJEEP components call our Technical Support Department at 661-398-9585

#### **BEGIN THE INSTALLATION**

STEP 1. UNPACK AND INSPECT CONTENTS FULLY.

## REMOVAL

Step1. Remove crankcase vapor return line from airbox.



Step2. Remove electronic air sensor from intake tube.



Step 3. Remove complete airbox assembly, including air intake tube,



Step 4. Airbox completely removed, ready for re-installation



## INSTALLATION



Step 5. Install new rubber reducer adapter

Step 6. Install short end of intake tube into reducer adapter. Swing it up out of way while you install the partition. (below)



Step 7. Install electronic air sensor into grommet in new intake tube.





Step 8. Time to install the sheet metal partition. Drop the partition down into the void of the old air box. You will see the tabs where the partition will bolt into place.




Step 9. As the partition is installed, install the tube support bracket to the rubber mount on the fender as shown, and swing down the air tube into place. Bolt the end of the support bracket to the intake tube.





Step 10. Re-install the crankcase vent tube, and re-connect the electronic air sensor plug.

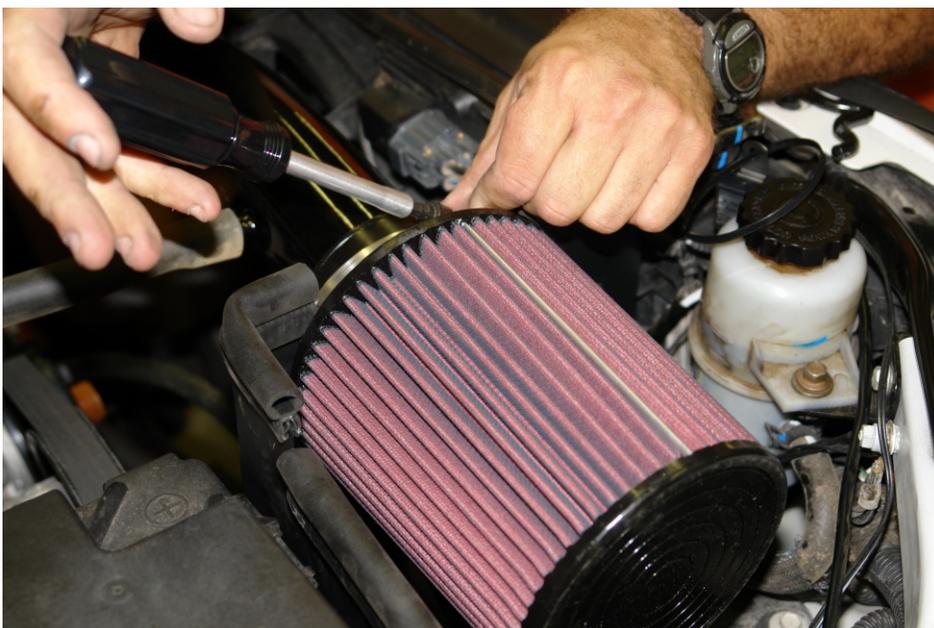

Step 11. Slide the air filter element into place and tighten clamp.



Step 12. You're done. Check for any possible gaps or leaks, and enjoy your improved performance.



PUREJEEP Division of Full-Traction Suspension  
6901 Unit F District Bl.  
Bakersfield CA 93313 U.S.A.

Hours of Operation  
Monday-Friday 8:00 A.M.- 4:30P.M. PST  
Closed Weekends & Holidays.

Order Desk-Customer Service 800-255-6464  
Technical Support 661-398-9585  
24 Hour Fax Order Line 661-398-9555  
Sales [sales@full-traction.com](mailto:sales@full-traction.com)